

Batman Wireless Gamepad


User Manual(PG-P4012)

Application Instruction:

1. This controller is mainly applicable to the P4, P3, Android , IOS (IOS 13.0 or above) and Windows PC; Support any version of P4 games.
2. High-performance BT wireless connection technology is adopted, to provide reliable signals within 8 meters without delay and without dropping the line; It has strong anti-interference and will not be affected by other wireless devices. No drive, automatic connection, no cumbersome coding process.
3. Built-in LED color breathing light to indicate the channel function and status indicator of the gamepad. The indicator function is the same as the original P4 gamepad, and different gamepad is indicated by LED of different colors.
4. Built-in asymmetrical motor, support dual motor vibration function.
5. Built-in 3D acceleration sensor and G gyroscope sensor, with six-axis induction function.
6. Equipped with a 3.5mm headphone jack, you can output the audio signal of the game through the headphone of the gamepad.
7. Ergonomic structure, comfortable hand feeling.
8. Gamepad will enter the sleep state after 5 minutes when without any operation, the indicator light will be off.
9. The online mode of BT is the same as that of the original handle.
10. Support dual-point capacitive induction touchpad.
11. Support USB to charge lithium battery.
12. Support PC USB online upgrade product program, thus support the latest upgrade system of P4 console, can effectively avoid the problem that the products can not be used due to the console upgrade system.

★ Due to the official game platform software upgrade or source code changes and other not resist factors caused of some games can not be played or connected with our gamepad. The company has no responsibility , the company reserves the right of final interpretation.

 Illustration of buttons

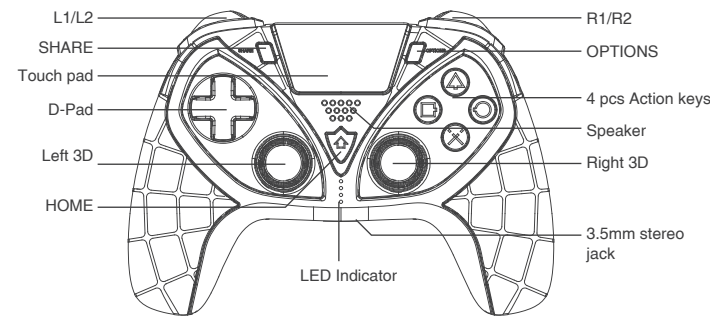

Characteristic Parameter:

- 1.Charging voltage: DC5V;
- 2.Battery capacity: 380mA;
- 3.Fully charged continuous use time: About 15 hours;
- 4.Charging time: About 3 hours;
- 5.Transmission distance: ≤8M;
- 6.Standby time: 30 days after fully charged;

Operation Instructions:

Connection of P4:

- 1) After the P4 console booted into the interface, insert the data cable into the USB port of the console, connect the controller to the data cable, then press the "HOME" key on the gamepad, the LED lights of the controller will flash, connection is successful when the single color LED on the controller is always bright, and then unplug the data cable. Press the "HOME" key on the gamepad, the gamepad will automatically connect back to the console.
- 2) Single click "HOME": 1.Display the main screen, 2.Double click "HOME" to switch the starting application, 3.Single click to wake gamepad up after enter sleep mode, 4.No wake P4 console up function.
- 3) Long Press "HOME": 1.End application, 2.Log out/power off the P4 console, 3.The operable items will be displayed according to the current situation.
- 4) In P4: SHARE key on the gamepad: Start sharing; OPTIONS key: Enable selection (option).
- 5) In P3, SELECT corresponds to the "SHARE" button of P4, START corresponds to the OPTIONS button of P4.
- 5) The Gamepad color LED indicate status description: show the Player status, press the "HOME", the RGB color LED will light up in the order of blue, red, green, and pink, configure each controller for user recognition of the login order. 1P: Blue; 2P: Red; 3P: Green; 4P: Pink.
- A. Working channel: P4 can be connected with a maximum of four P4 gamepads at the same time, controllers are indicated by different LED colors.
- B. After the controllers are connected, the corresponding channel LEDs indicates the working channels; The first controller is connected to the console successfully, the controller LED is lit blue , indicate User 1; The second gamepad is connected to the console successfully, the gamepad LED is lit red, indicate User 2; Turn off the power of the P4 console, the color LED will go out within 10 seconds, and the system is in a sleep state.
- 6) Test of the touchpad: In P4 settings—Network connection—Select wireless network—Input interface, you can test the function of the touchpad.
- 7) Gravity sensing and gyroscope functions will have corresponding motion sensing when operating in the games which supports six axes.
- 8) The audio output of speaker and headphone can be tested in the game; When the headphone is plugged in, the speaker are silent, and when the headphones are pulled out, the speaker sounds.

Connection of P3/ PC:

- 1) Connect the controller to the USB port of P3/ PC through the USB data cable, and use it as a wired controller.
 - 2) P3/ PC don't support six-axis sensing and vibration functions. When connecting to a PC, you need to install the P4 driver.
- Game platform: P3 game platform

Connection of Andoird Device (Android HID Mode)

- 1) Press SHARE+HOME to turn on the controller in the shutdown state, and the indicator light flashes quickly at intervals.
- 2) At the same time, in the BT list of the Android device, find and click "Wireless Controller" to pair.
- 3) After successful pairing, the LED is always on and the controller enters the Android mode. You can play games under the Android standard protocol.

Connection of IOS Device (IOS Standard Mode)

- 1) Press SHARE+HOME to turn on the controller in the shutdown state, and the indicator light flashes quickly at intervals.
- 2) At the same time, in the BT list of the IOS device, find and click "DUALSHOCK 4 Wireless Controller" to pair.
- 3) After successful pairing, the LED is always on. You can play MFI games.

Programming Function

- 1.The four programming keys are on the back of the controller. You can realize your favorite action keys or function mapping or programming.
- 2.Programming can be performed on any one of the action keys or combination keys (a single programming key can be set up to 12 Key combination).
- 3.Set programming keys: first press and hold the programming key (such as M1), and press OPTIONS simultaneously, then the color LED will flash red, green and blue quickly, release the button to enter the setting mode.
- 4.Press one or more regular function keys to be copied at this time (X/O/□/△/L1/L2/R1/R2/L3/R3/ Up /Down /Left /Right).
- 5.Press the programming button again to exit, the setting is completed, and the LED lights return to the display state before setting.
- 6.Clear programming key function: press and hold the programming key (such as M1) and OPTIONS simultaneously, then the color LED will flash red, green and blue quickly, release the key and press the programmed key again to clear the programmed key function.
- 7.The programming setting has the function of shutdown save function, the programmed function can be saved when the controller shutting down & sleeping and restarting.
- 8.The initial settings of the four programming keys are X/O/□/△

 
Notes:

- 1.Please do not store this product in wet or high-temperature areas.
- 2.Don't knap, bear, drub,pierce, or try to decompose this product, to avoid unnecessary damage to the product.
- 3.The products has built-in batteries, and please don't discard them together with the garbages.
- 4.Non professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty services.
- 5.Due to the official game platform software upgrade or source code changes and other not resist factors caused of some games can not be played or connected with our gamepad. The company has no responsibility , the company reserves the right of final interpretation.

Accessories List



Wireless gampad x1



User manual x1



Type-C cable x1